



# ABB GEC PPM METER PPM REGISTER STEPPED WITH DISPLAY BUTTON SEQUENCE

If your RM number is 545 or 667 this is the meter type you may have. The RM number is located at the bottom left hand side of the meter. This meter has an automatic scrolling electronic display. The display changes every 6 seconds illustrating 13 different information panels.

